

# REMOVAL AND INSTALLATION OF TCU

1. Disconnect the negative battery cable.
2. Move the driver's seat forward and unfold the cut section of the carpet.



3. Remove the TCU mounting bolts (10 mm, LH/RH).

Tightening torque	10 Nm
-------------------	-------



4. Disconnect the connector and remove TCU.



A / T
M / T
T / C
CLUTCH
AXLE
SP
ST'NG
BRAKE
A / BAG
A / CON

CHANGED BY	
EFFECTIVE DATE	
AFFECTED VIN	