

OUTSIDE REARVIEW MIRROR

1. REMOVAL AND INSTALLATION OF OUTSIDE REARVIEW MIRROR



Mounting Points of Outside Rearview Mirror



1. Remove the inner covers (A) from the outside rearview mirror.



2. Remove the door trim.

* Unscrew eight mounting screws with dotted circle and remove the door trim starting from lower side. (For details, refer to "Door" section.)

3. Disconnect the outside rearview mirror connector.



4. Unscrew five mounting bolts and remove the outside rearview mirror.



CHANGED BY	
EFFECTIVE DATE	
AFFECTED VIN	