


6. TCCU-PART TIME


1) POWER SUPPLY, GROUND, INDICATION LAMP, PNP RELAY, CLUTCH SWITCH, CLUTCH SWITCH CIRCUIT

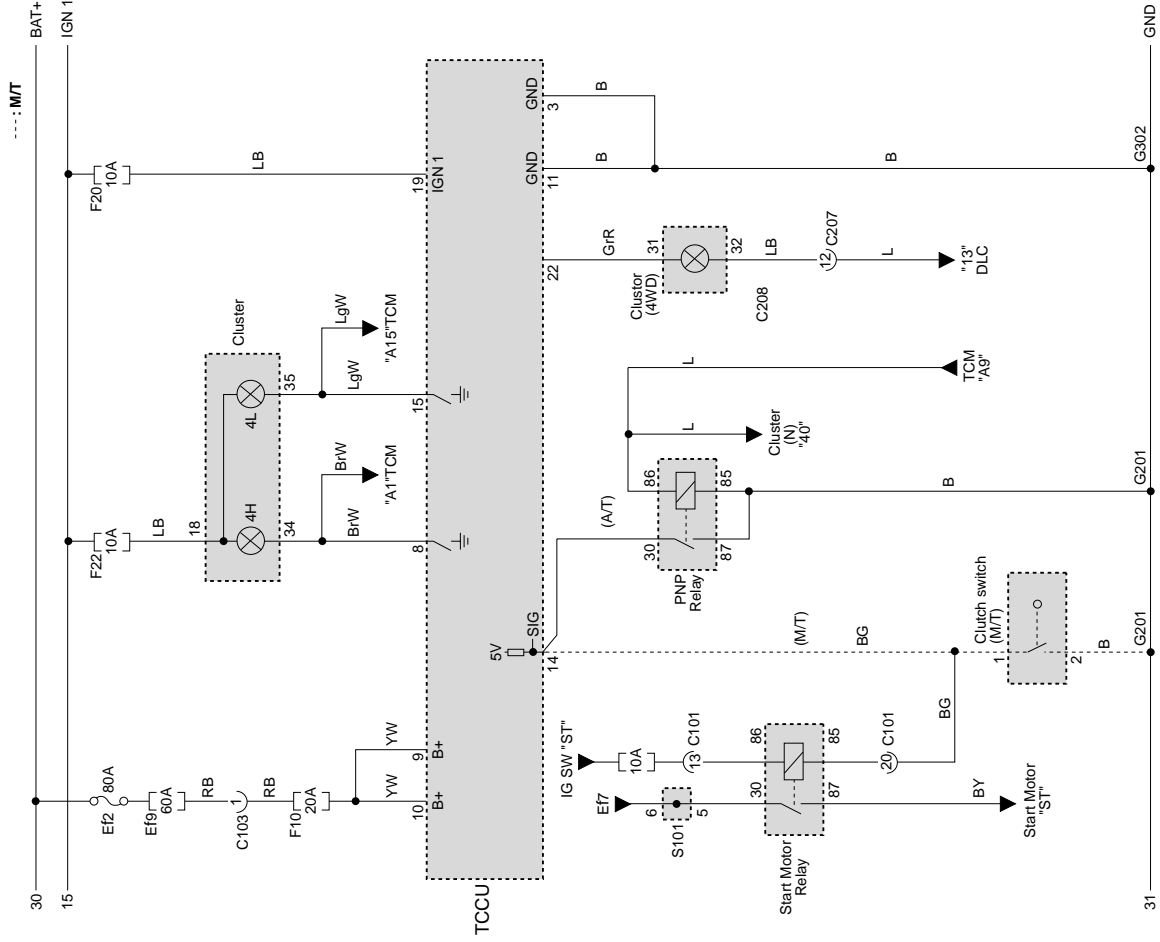


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING WIRING HARNESS	CONNECTOR POSITION
C-101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C-103 (2Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
C207 (14Pin, Black)	DLC Connector - Main	Beside The Steering Column
G201	Main	Right The I/P Fuse Block
G302	Main	Beside The TCCU

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

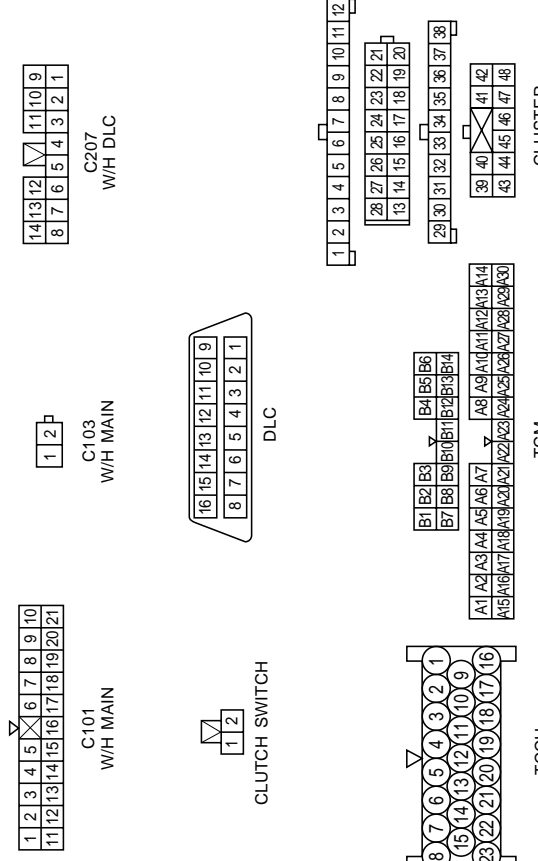

2) 4WD SWITCH , T/C SPEED SENSOR, T/C MOTOR CIRCUIT

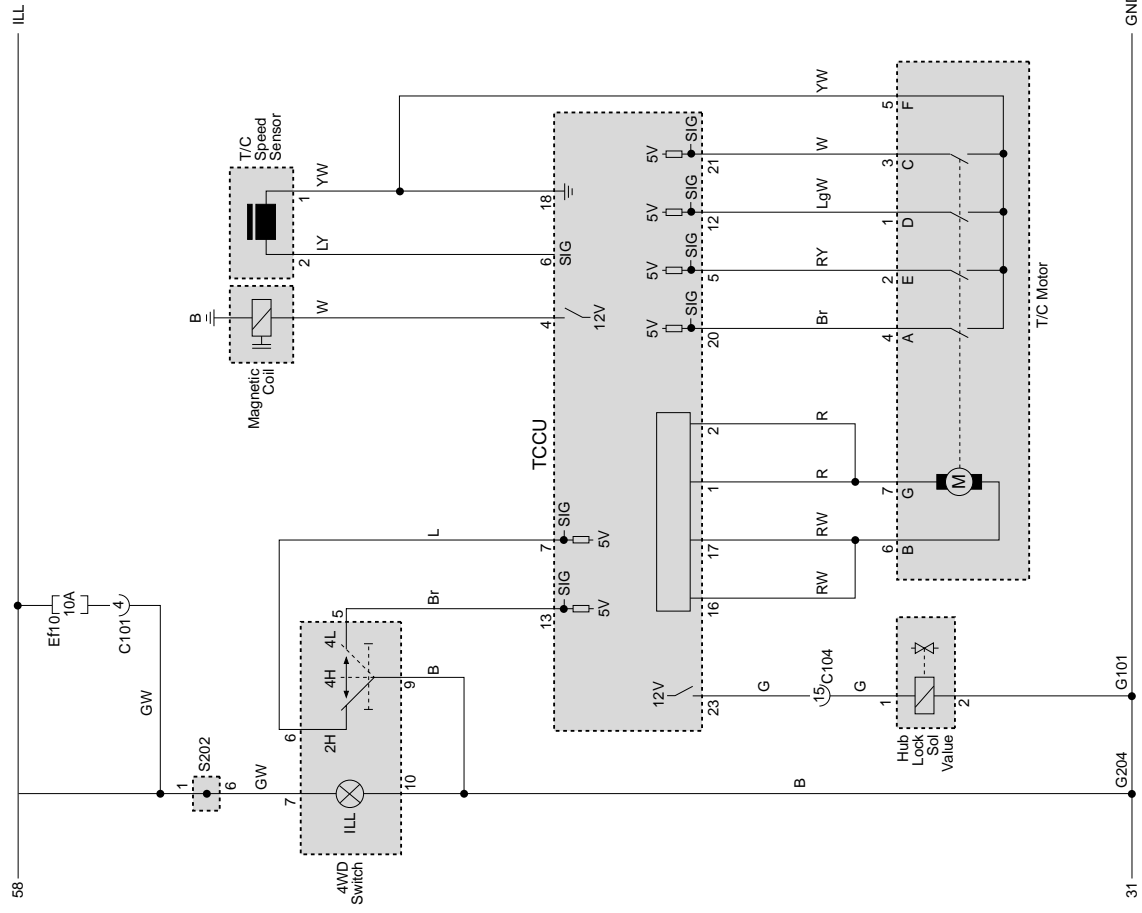

a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING WIRING HARNESS	CONNECTOR POSITION
C104 (15Pin, Black)	Engine - Main	Under The Engine Room Fuse Block
S202 (Black)	Main	Under Right The Audio
G101	Engine	Behind The Left Lamp
G204	Main	Upper The ECM

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

